5. Printed Circuit Board Diagram

5-1 MAIN

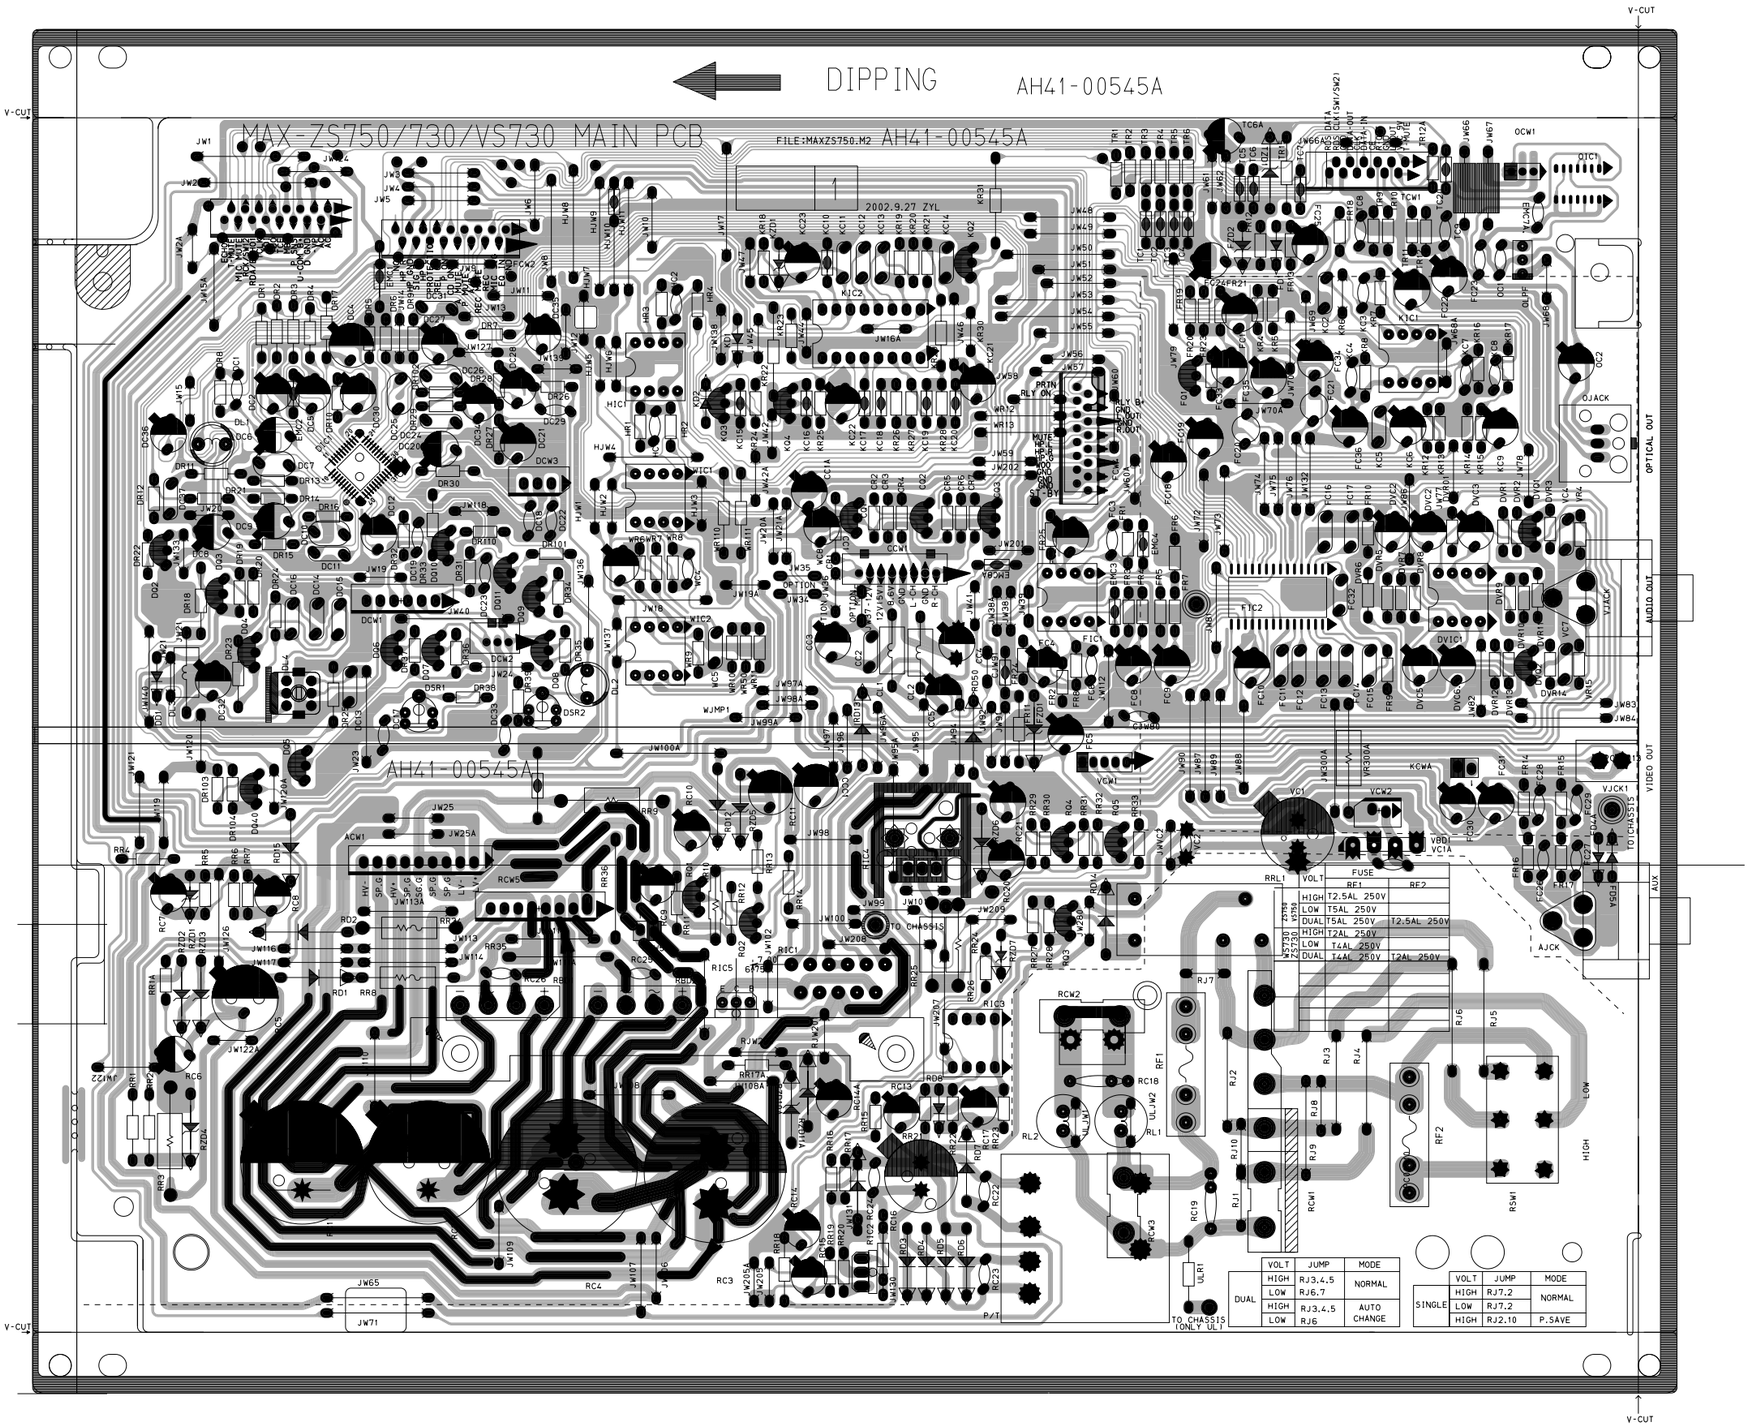

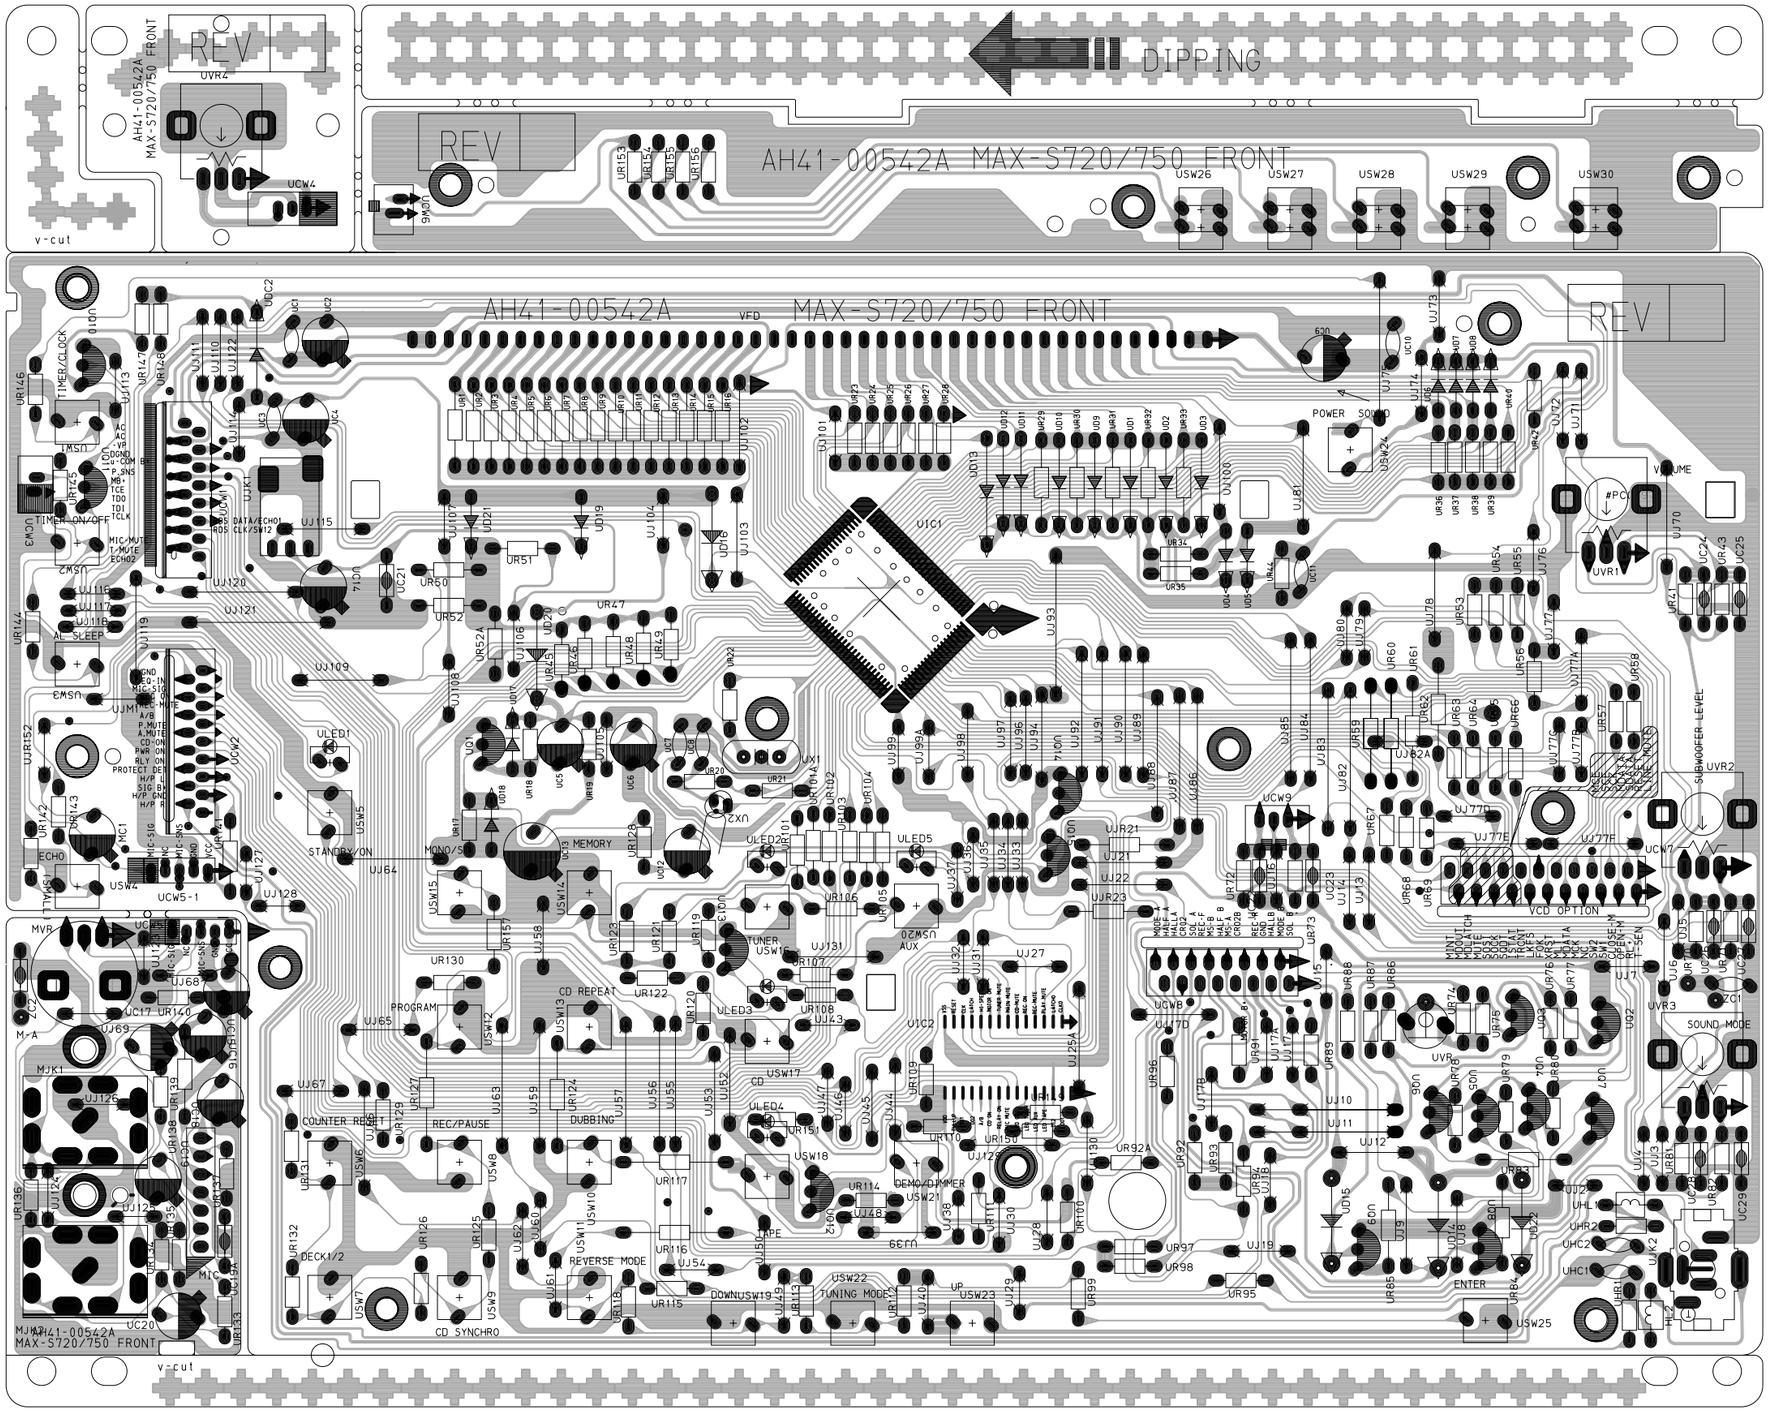
AH41-00542A MAX-S720/750 FRONT
REV
DIPPING
AH41-00542A MAX-S720/750 FRONT
REV
v-cut
VOLUME
SUBWOOFER LEVEL
SOUND MODE
VCD OPTION
POWER SOUND
TIMER/CLOCK
TIMER ON/OFF
AL SLEEP
ECHO
STANDBY/ON
MONO/ST
MEMORY
TUNER
AUX
PROGRAM
CD REPEAT
COUNTER RESET
REC/PAUSE
DUBBING
CD
DECK1/2
REVERSE MODE
TAPE
DOWN
TUNING MODE
UP
DEMO/DIMMER
ENTER
CD SYNCHRO
AH41-00542A
MAX-S720/750 FRONT

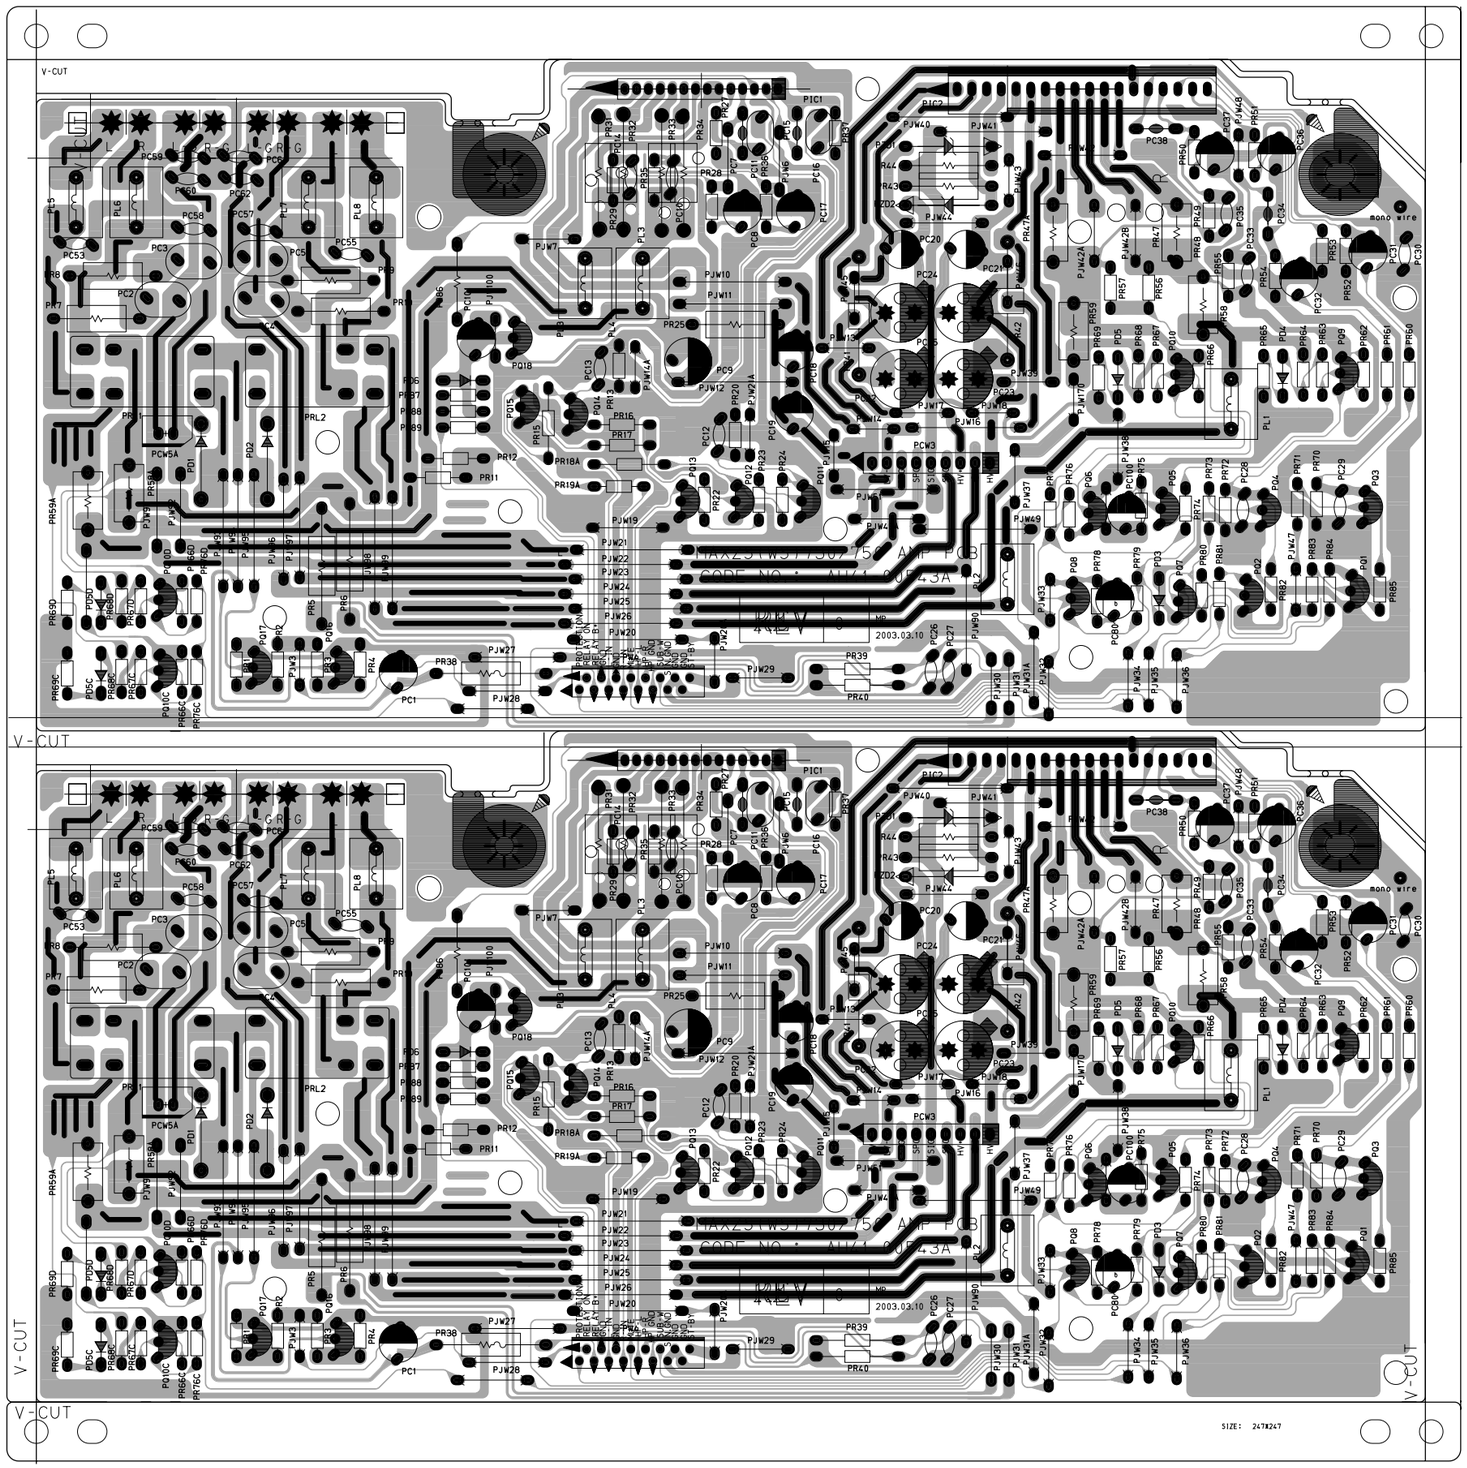
V-CUT
V-CUT
V-CUT
V-CUT
2003.03.10
SIZE: 247X247

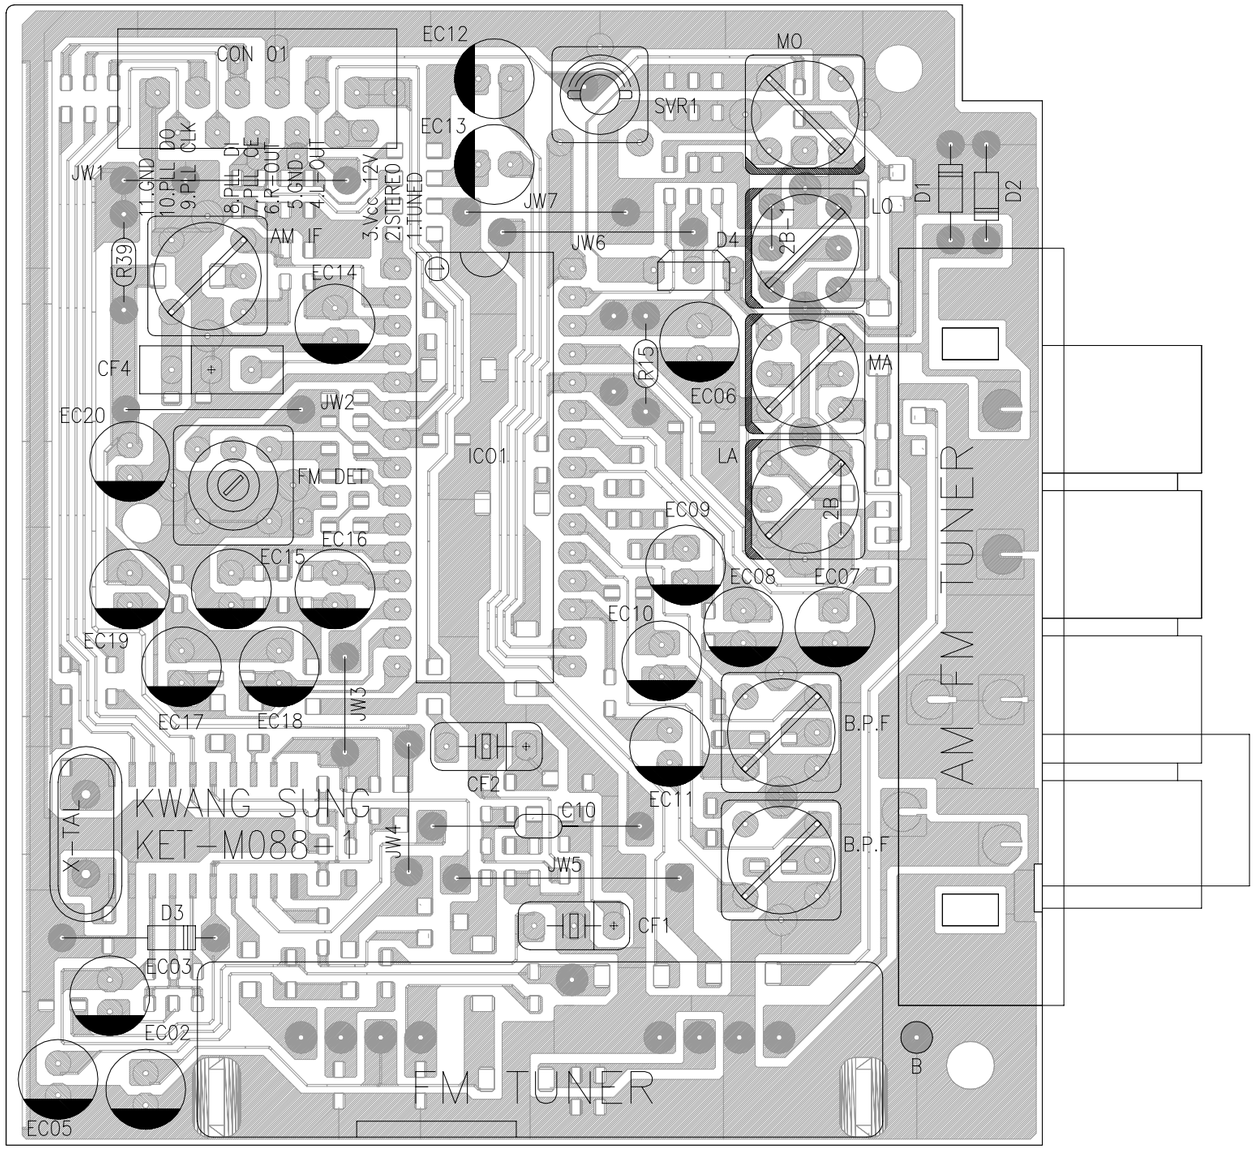
CON 01
EC12
EC13
MO
SVR1
JW1
11.GND
10.PLL DO
9.PLL CLK
8.PLL DI
7.PLL CE
6.IF OUT
5.GND
4.IF OUT
3.Vcc 12V
2.STEREO
1.TUNED
JW7
JW6
D4
LO
D1
D2
2B-1
R39
AM IF
EC14
CF4
JW2
EC20
R15
EC06
MA
LA
ICO1
FM DET
EC09
2B
EC16
EC15
EC08
EC07
EC10
EC19
EC17
EC18
JW3
B.P.F
CF2
EC11
C10
JW4
JW5
X-TAL
KWANG SUNG
KET-M088-1
B.P.F
D3
CF1
EC03
EC02
EC05
FM TUNER
AM-FM
B